



## DAILY CARE GUIDELINES FOR DIVERS

Your WiseLED Flashlight is maintenance free, but when you are using it for diving, you need to follow these guidelines for daily care, in order to ensure a long life of your WiseLED Flashlight. Failure to comply with these instructions may eventually result in warranty nullification.

### THE END CAP

All end caps bought with flashlight after May 6, 2010 are water proof. This means that if the end cap has been properly inserted before diving, the charger plug on the flashlight will remain dry and will not need to be cleaned after diving.

Even though the flashlight is water proof (without the end cap attached), you should always insert the end cap to keep out sand and dirt.

If the end cap has not been inserted correctly before diving, you will have to remove it after diving to clean the flashlight. Rinse the flashlight immediately with fresh water to remove salt crystals, sand and dirt.

### BEFORE CONNECTING TO CHARGER

It's very important to make sure that the flashlight is absolutely dry before connecting it to the charger. If you have just rinsed the flashlight, you need to air or blow dry it before connecting to charger.

### AFTER USE

If dirt has accumulated in the lens cavities, you can rinse with fresh clean warm water - maybe add a little dishwashing soap. Do not use alcohol or any chemicals to clean the lens, as this will cause permanent damage to the lens. Use fresh water only or fresh water with a little dishwashing soap added.

Remove sand or dirt from the rubber O-rings on the endcap part. If an O-ring has cracks or cuts, contact WiseLED for assistance. If your WiseLED flashlight is already dry, you may find it difficult to remove all the dirt, therefore rinse while still wet. If you are unable to disconnect any part or the quiklock ring, because salt crystals have accumulated between the parts, simply leave your WiseLED flashlight in fresh water for about an hour and try again.

Use only silicone based grease or oil to lubricate the O-rings, the gasket and the thread regularly. **Never try to open a WiseLED flashlight or light source, as this will break the seal and void our warranty.** If required, send it to WiseLED for repair.

WiseLED Aps  
Bøgebakken 15, DK 3250 Gilleleje, Denmark  
www.wiseled.com, Phone +45 8888 7300

