

## FLY LOCK MODE

WiseLED's flashlights, The WiseLED Tactical and the WiseLED Compact, both have a fly lock setting in which the flashlight can not be turned on by accident.


### Set flashlights to fly lock mode

#### **The WiseLED Tactical:**

Press button A 4 times within 2 seconds: The taillight turns orange. Then press the button again within 2 seconds and the flashlight button is locked. To unlock the button, press again 4 times within 2 seconds.

#### **The WiseLED Compact:**

Press the button 4 times within 2 seconds: The taillight turns orange. After 2 seconds the taillight turns blue, then press the button again within 2 seconds (while the taillight is blue) and the flashlight button is locked. To unlock the button, press again 4 times within 2 seconds.

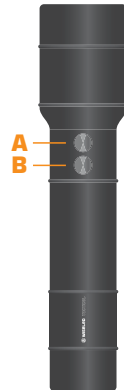

This document can be downloaded from WiseLED's website  
[http://www.wiseled.com/wiseled\\_support\\_download.htm](http://www.wiseled.com/wiseled_support_download.htm)

WiseLED Aps.  
Bøgebakken 15  
DK - 3250 Gilleleje  
Denmark

Phone +45 8888 7300  
Fax +45 8888 7309  
[info@wiseled.com](mailto:info@wiseled.com)  
Company registration number 27311776